


# Exploded View P217/P218/P219/P220/P221/P227/P230 Pumps

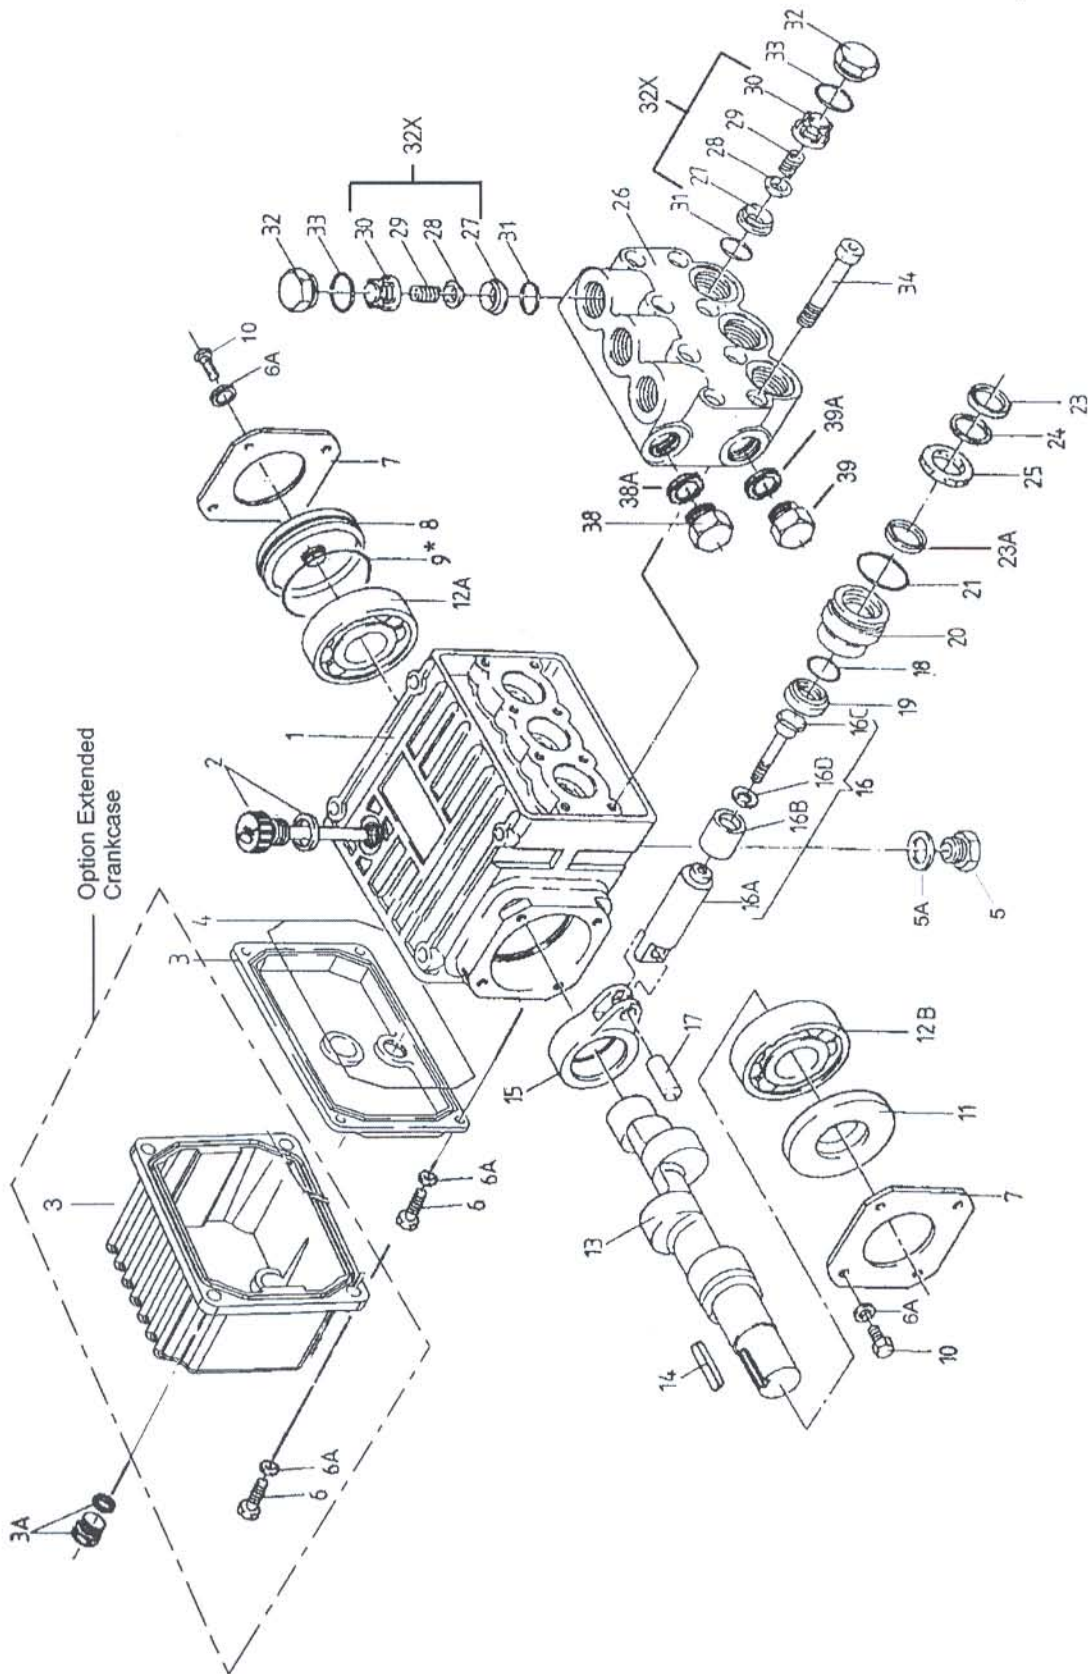

## Spare Parts

### P217/P218/P219/P220/P221/P227/P230 Pumps

<u>ITEM</u>	<u>PARTNO.</u>	<u>DESCRIPTION</u>	<u>QTY.</u>	<u>ITEM</u>	<u>PARTNO.</u>	<u>DESCRIPTION</u>	<u>QTY.</u>
1	08300	Crankcase	1	16A	08468	Plunger Base	3
2	06773	Oil Dipstick with O-Ring	1	16B	08455	Plunger Pipe	3
3	08302	Crankcase Cover, Short	1	16C	08456	Tension Screw	3
3	08302-L	Crankcase Cover, Long	1	16D	07676	Copper Gasket	3
3A	07190	Drain Plug & Gasket	1	17	08442	Wrist Pin	3
4	08005	O-Ring	1	18	07770	O-Ring	3
5	06273	Oil Drain Plug	1	19	08356-0010	Oil Seal	3
5A	08192	Gasket	1	20	08444	Seal Case	3
6	07188	Screw, Crankcase Cover	4	21	08443	O-Ring	3
6A	01176-2	Spring Washer	4	23	08477	V-Sleeve, Weep	3
7	08303	Bearing Cover I	2	23A	08087	V-Sleeve, Brown	3
8	08490	Sight Glass	1	24	07904	Pressure Ring	3
9	08492	O-Ring for Sight Glass	1	25	08445	Weep Return Ring	3
10	07225	Screw with Lock Washer	8	26	06582*	Valve Casing 1/2" Inlet Ports	1
11	01166	Radial Shaft Seal	1	27	07849	Valve Seat	6
12A	08020	Ball Bearing	1	28	07491	Valve Plate	6
12B	01020	Ball Bearing	1	29	07906	Valve Spring	6
13	08465	Crankshaft (P217)	1	30	07907	Valve Spring Retainer	6
13	08440	Crankshaft (P218)	1	31	07853	O-Ring	6
13	08466	Crankshaft (P219)	1	32	07928	Valve Plug	6
13	08467	Crankshaft (P220)	1	32X	07946	Valve Assembly Complete	6
13	12258	Crankshaft (P221)	1	33	07913	O-Ring	6
13	06547	Crankshaft (P227)	1	34	08316	Hex Head Cap Screw	8
13	06694	Crankshaft (P230)	1	38	13338	Plug, 3/8" BSP	1
14	06207	Woodruff Key	1	38A	08486	Copper Crush Washer, 3/8"	1
15	08333	Connecting Rod	3	39	07109	Plug, 1/2" BSP	1
16	08469	Plunger, Complete, 18mm	3	39A	07661	Seal	1